




## Plugging In Foot Control

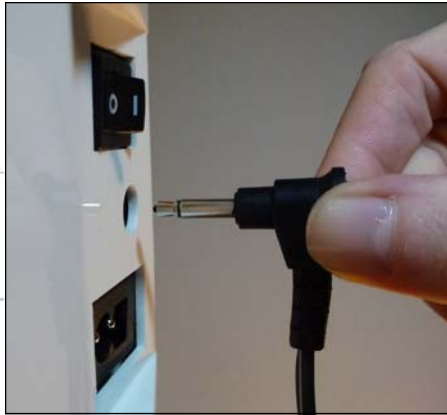

Step 1 – Line up pin to socket



Step 2 – Push pin into socket



Step 3 – Push until plug is flush with machine

The foot control plug must be pushed into the sewing machine fully for the foot control to work properly. (See Step 3.)

Improperly plugging the foot control cord into the sewing machine may cause a C3 error, a beeping noise and/or machine malfunction to occur.